


Sick Firmware update , Tim / CLV

- **Export...** – exports the device and the corresponding project information and saves these in a *.sopas file
- **Download firmware...** – opens the dialog box that helps you to load a new firmware version onto the device. This menu item is only available if you are logged in to the device and the device is online.
- **Delete device** – permanently deletes the device from the project, although it will still be possible to find it in the search results window. The parameter values of the deleted device will be lost if you do not transfer them to the device before deleting.

Om een firmware update uit te voeren moet je online en ingelogd zijn. Onderstaand de login gegevens. USER LEVEL service PASSWORD servicelevel Na succesvol inloggen op de user level service klik je op het tabblad "Device" vervolgens op "download firmware".

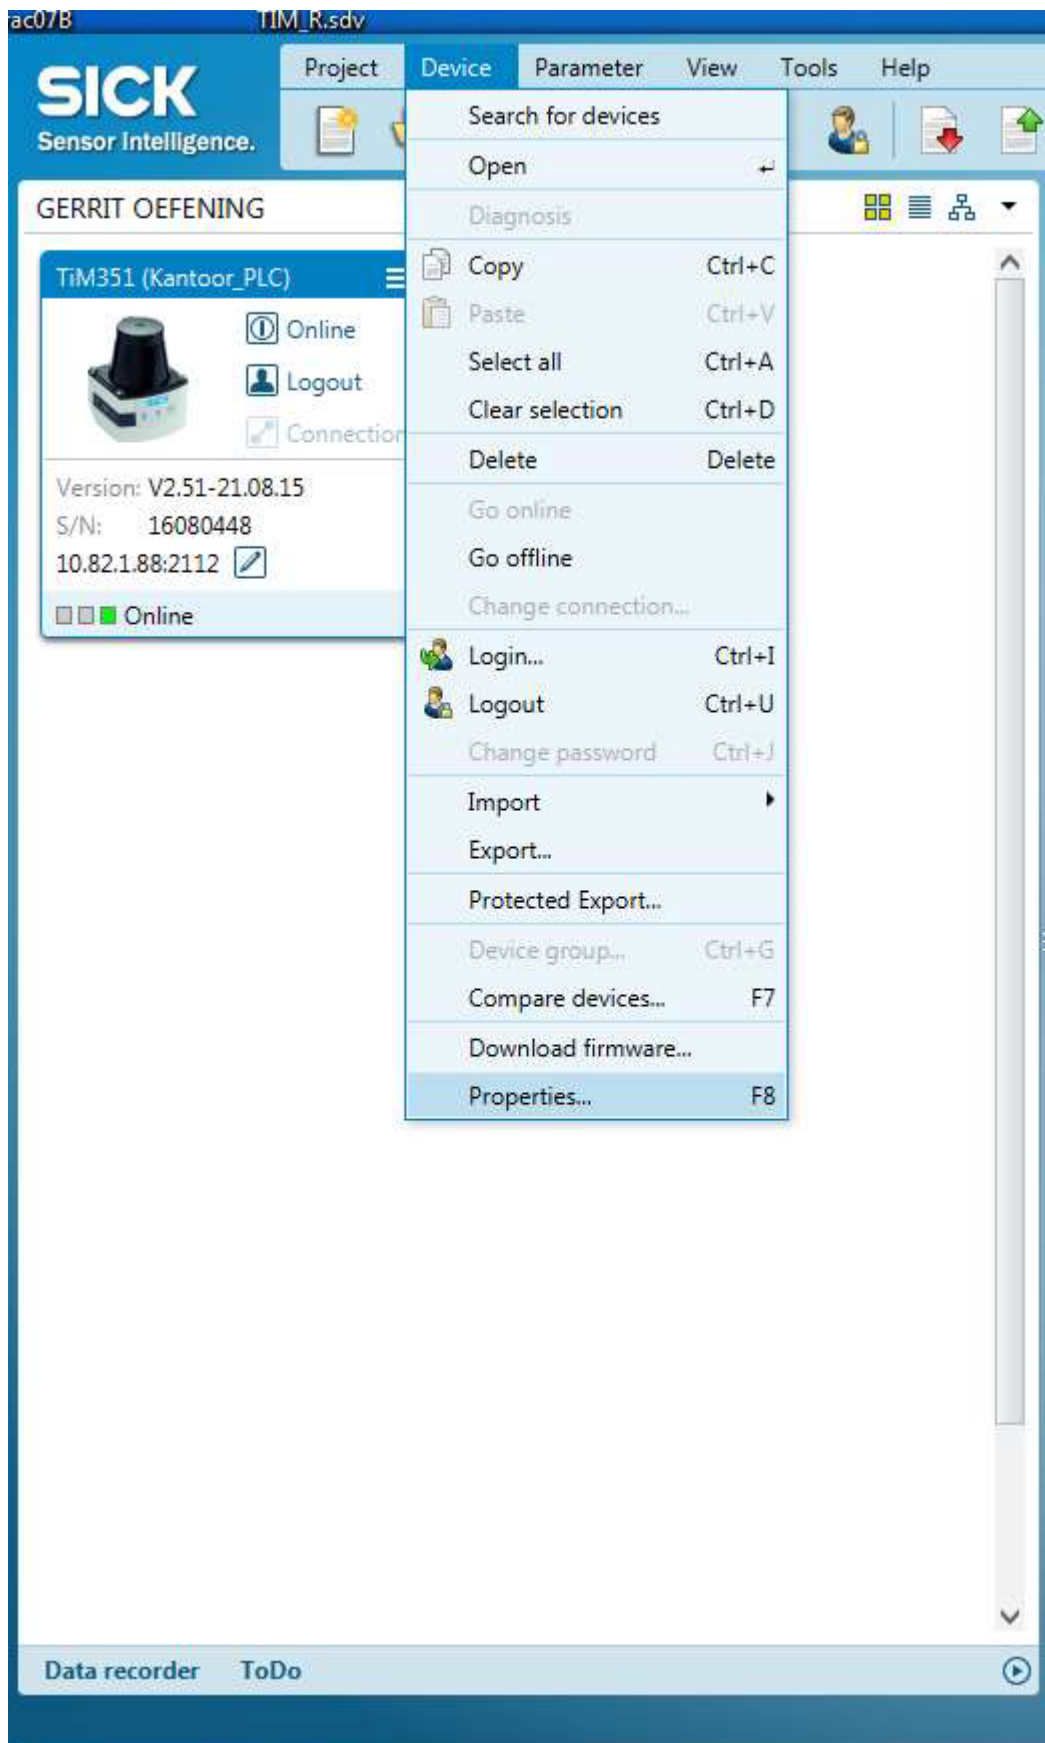

Vervolgens krijg je een pop-up waarin de nieuwe update gezet moet worden.

LET OP: HET CONFIGURATIE VENSTER VAN het device MAG NIET GEOPEND ZIJN.